

# Instructions for 1- 4 Minute Dishwasher

1. Place dishwasher on level surface, the drain is gravity feed.
2. Connect to cold soft water supply.
3. Connect electricity supply - Orange light come on
4. Level dishwasher using spirit level
5. Check drain plug is fitted correctly inside washer.
6. Turn left hand Control Knob to Wash, dishwasher fills with water.
7. The heater element heats water - takes approximately 75 minutes to heat.
8. The green light will light when the water temperature has reached sufficient heat.
9. Turn right hand knob to number of minutes you wish to wash.
10. The knob will return back to the original position as the wash progresses
11. To drain the machine remove the plug from the inside and turn the knob to drain.
12. When the machine is empty turn the knob to zero.

Please note this washer washes tableware that have been scraped of food waste. Peas, meat, potatoes with affect the reliability of this machine. Please be aware if you are in a hard water area you must use a water softener to operate this machine, failure to do so will cause scale build up on the boiler elements and or pump failures which are chargeable repairs.

This machine is not hot water fill