

 
**Cuisinart®**

**Ice Cream Professional**

ICE50BCU



## Product Description

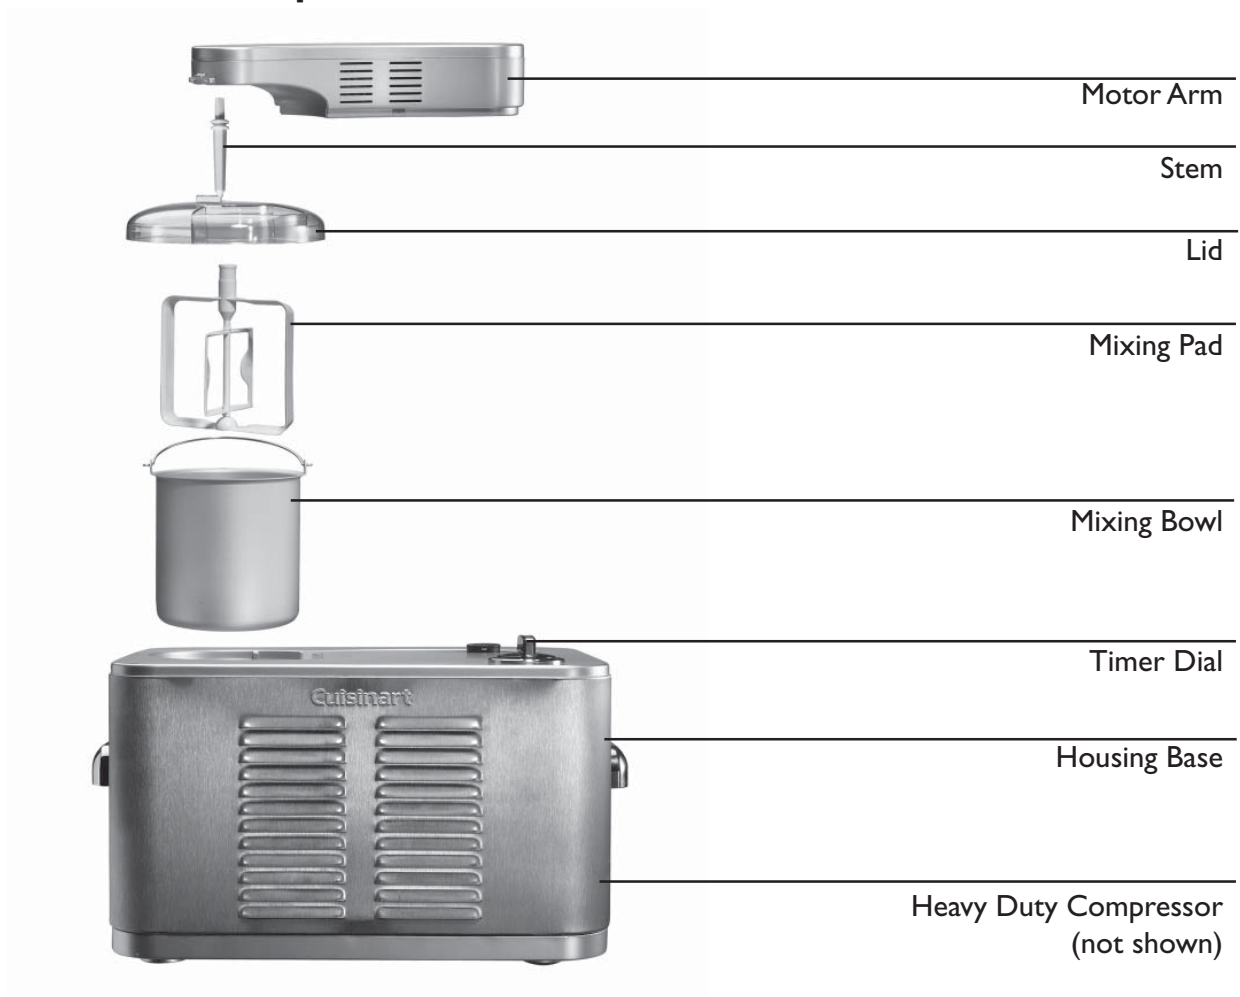

The Cuisinart logo is displayed in white text on a dark blue square background.

**Cuisinart®**

**Carefully read all the instructions thoroughly before using the appliance and keep in a safe place for future reference**

## **Safety Cautions**

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Do not immerse the base in water, any other liquid or in a dishwasher.
- To clean base, disconnect from the mains, clean using a damp cloth. Allow to dry thoroughly before re-use.
- Always disconnect the appliance immediately after use.
- Always unplug from the mains when not in use and before cleaning.
- Never disconnect the plug by pulling on the mains lead.
- Always ensure that your hands are dry before removing the plug from the mains socket.
- Avoid contact with moving parts. Keep hands, hair, clothing and spatulas and other utensils away during operation to reduce the risk of injury and/or damage to the appliance.
- Never use a scourer to clean appliance. Wipe with a warm moist cloth.
- Do not allow the lead to overhang the edge of the table or work surface.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Children should always be supervised to ensure that they do not play with this product.
- Do not use this appliance if the lead is damaged. In the event of damage the lead must be replaced by a special

The Cuisinart logo is displayed in white text on a dark blue square background in the upper right corner of the page.

Cuisinart®

- Do not use the appliance if it has fallen or shows signs of damage. Discontinue use immediately. (See “UK After Sales Service” section).
- No repair can be carried out by the user. Return the appliance to “Cuisinart Service Centre” for inspection and repair or replacement. (See “UK After Sales Service” section).
- Use this appliance only as described within these instructions for use. Retain these for future reference.
- For indoor use only.
- For domestic use only.
- The appliance should remain upright at all times. If the appliance is turned on its side or upside down, you will need to put it in an upright position and wait 24 hours before using.
- This appliance complies with the basic requirements of Directives 04/108/EEC (Electromagnetic Compatibility) and 06/95/EEC (Safety of domestic electrical appliances) amended by Directive 93/68/EEC (CE Marking).
- Do not use any attachments other than those recommended or sold by Cuisinart.
- **WARNING:** A cut off plug inserted into a 13 amp outlet is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.

Cuisinart®

 
## Instructions for Use

Before first use, clean the lid, mixing bowl and mixing paddle in warm soapy water.


**N.B.** Do not clean any of the part with abrasive cleaners, hard implements or in the dishwasher.

### A Assembling the Ice Cream Professional

- Take the motor arm and place smooth side face down on a flat surface so that the holes are visible on top.
- Align the flat end of the stem with the cut out in the motor arm, and push into position.

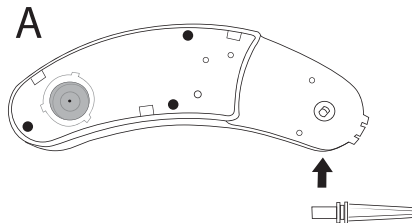

 - Place the domed side of the lid face down over the top of the stem until resting on the motor arm with the opening. Align the plastic ridge on the top of the lid with the bracket on the edge of the motor arm. Push the lid back until locked into place. This will secure the lid to the motor arm.

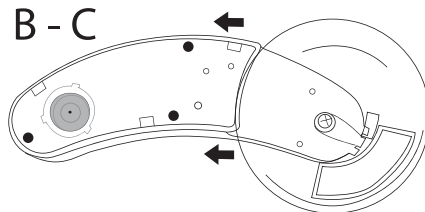

- Align the mixing paddle with the top of the stem and push into place.

**N.B.** There should be a 1cm gap between the bottom of the paddle and the bottom of the stem.

- Place the mixing bowl into the housing base. Turn the motor arm over and attach to the top of the base with the mixing paddle in the mixing bowl.

### **B Dismantling the Ice Cream Professional**

- Carefully lift out the motor arm and lid from the top of the unit by lifting upwards. Turn over and lay on a flat surface.
- Carefully remove the mixing padding by lifting upwards. Slide the lid away from the motor arm so that the round cut of the lid is directly around the bottom of the stem. Lift lid over and off of the stem.
- Pull the stem out away from the motor arm.
- Finally, carefully lift the mixing bowl out of the housing base.

### **C Making Frozen Desserts or Drinks**

**WARNING:** This appliance should remain upright at all times. If appliance is turned on its side or upside down, you will need to put in an upright position and wait 24 hours before using.

- Firstly, prepare the ingredients required for your recipe, following the recipes in this instruction book or your own.
- Place the mixing bowl in the housing base.
- Pour the ingredients into the mixing bowl.
- Assemble the mixing arm and fit to the top of the appliance.
- Turn the dial to required time, 35-45 minutes for a soft dessert, 45-60 minutes for a hard dessert. The mixing process will begin. The unit will automatically stop mixing and turn itself off when the set time has elapsed, an audible tone will sound to alert you.

**N.B.** if the frozen dessert reaches maximum thickness before the set time has elapsed, the unit will stop mixing. If you do not shut off the timer manually it will continue counting down to '0' and will then shut itself off.