

CINDERS BARBECUES


CHANGING CYLINDERS

This barbecue is designed for use with propane cylinders of 19 kg in weight. WHEN CHANGING cylinders follow the instructions in order as noted below.

- a) Turn 'OFF' the barbecue by first turning the cylinder valve on the gas bottle in a clockwise direction.
- b) Turn 'OFF' clockwise both gas taps situated at the ends of the barbecue.
- c) Extinguish all naked lights, cigarettes and other sources of ignition in the vicinity of the barbecue.
- d) The regulator can now be disconnected from the gas cylinder valve by turning clockwise with the aid of the cylinder spanner provided.
- e) Screw the black cylinder sealing plug into cylinder valve on the empty cylinder by turning anticlockwise with a screwdriver.
- f) Ensure that the cylinder valve on the full cylinder is turned 'OFF' by turning in a clockwise direction. Remove the black sealing plug from the cylinder valve by turning clockwise with a screwdriver.

WARNING: THE CHANGING OF CYLINDERS MUST BE CARRIED OUT IN A FLAME FREE ENVIRONMENT.

When connecting the regulator to the cylinder avoid undue twisting of the flexible hose. The approved regulator supplied with this barbecue is adjustable up to 1.0 bar and is for use on 'PROPANE ONLY'. **THE LEAFLET IS ATTACHED TO THE REGULATOR. THIS MUST BE READ THOROUGHLY AND THE CONNECTING INSTRUCTIONS FOLLOWED EXACTLY. THE CYLINDER SPANNER SUPPLIED WITH THIS GAS BARBECUE MUST BE USED TO TIGHTEN THE REGULATOR CONNECTOR INTO THE CYLINDER VALVE. A LEAKAGE CHECK SHOULD BE CARRIED OUT WITH A SOAPY WATER SOLUTION ON THE REGULATOR TO CYLINDER VALVE CONNECTION AT THIS STAGE.**

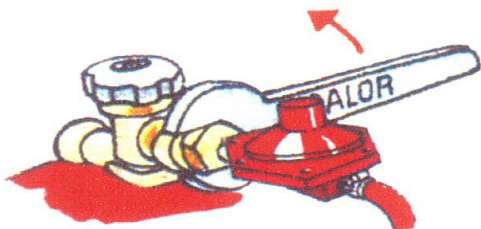

POSITIONING OF THE GAS CYLINDER

Ensure that the gas cylinder is not placed in contact or underneath the barbecue. We recommend that the cylinder should be placed as far from the barbecue as possible without placing undue strain on the hose.

Ensure that the cylinder is placed on a flat, level surface and that the hose is neither stretched nor twisted.

The cylinder must be located to give good access to connect and disconnect the regulator to or from the cylinder.

POSITIONING THE BARBECUE

The barbecue is designed to be freestanding.

Ensure that the barbecue is placed on a flat surface with the clearances specified in the figure below between any side, rear or overhead obstructions. When selecting the location ensure the barbecue is not placed near combustible materials or in a windy environment.

LIGHTING THE BARBECUE

- a) Turn 'OFF' clockwise the gas taps at either end of the barbecue.
- b) Fit the regulator as instructed on page 4 of this instruction document.
- c) Turn 'ON' the gas cylinder by turning the cylinder valve anticlockwise.
- d) Insert a lighted taper or gas match into the appropriate brass lighting hole (located centrally underneath) for the side to be lit and turn 'ON' the appropriate gas tap by again turning anticlockwise. The burner should light.
- e) If the burner does not light immediately, turn 'OFF' the gas tap by turning clockwise and try again after a period of 5 minutes has elapsed.
- f) To light the other burner repeat operations (d) and (e) noted above.

TURNING OFF THE BARBECUE

To turn 'OFF' one side of the barbecue turn the appropriate gas tap clockwise.

To turn 'OFF' the whole barbecue first turn the cylinder valve in a clockwise direction.

Turn the gas taps situated at the ends of the barbecue clockwise to the 'OFF' position.

DO NOT ATTEMPT TO RE-LIGHT THE BARBECUE FOR FIVE MINUTES.

WARNING – GAS LEAKAGE.

Should a gas leak be suspected, close the cylinder valve and extinguish all naked lights. LOCATE THE LEAK BY SMELL, OR WITH A SOAPY SOLUTION BRUSHED ONTO JOINTS. A LEAK WILL SHOW UP AS BUBBLES. NEVER USE A MATCH OR NAKED LIGHT TO SEARCH FOR LEAKS.

STORING THE BARBECUE

It is important that the barbecue is stored in dirt free, damp free conditions indoors when not in use for any period of time. The barbecue should always be disconnected from the cylinder during storage.

The cylinder must always be stored outdoors when not in use.

The barbecue should be stored in an upright position and be secured if necessary.

WARNINGS

THIS APPLIANCE GETS VERY HOT. TAKE CARE WHEN CHILDREN OR ELDERLY PEOPLE ARE PRESENT. (BS:5258:Pt14)

ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY. (BS EN 498)

USE OUTDOORS ONLY (BS AND EN)

TAKE CARE NOT TO TOUCH THE TOP OR SIDES OF THE BARBECUE AS THESE AREAS GET EXTREMELY HOT AND WILL RESULT IN BURNS.

PROTECTIVE GLOVES MUST BE USED WHEN USING THIS BARBECUE.

DO NOT MOVE THE APPLIANCE WHILST IT IS ALIGHT OR IN THE HOT CONDITION.

ANY MODIFICATION OF THE APPLIANCE MAY BE DANGEROUS.

THIS APPLIANCE SHALL BE KEPT AWAY FROM FLAMMABLE MATERIALS.

Instructions received.....

Print name..... Date.....