

Moving patio heaters with gas bottle inside causes chargeable damage


INFERNO HEATER OPERATING INSTRUCTIONS

LIGHTING PROCEDURE

1. Turn the control knob OFF. Slowly open the gas cylinder valve.
2. Push in and turn control knob anti-clockwise to IGNITE.
3. Keep control knob depressed for up to 30 seconds until pilot is lit.



If pilot does not light, turn control knob to OFF and wait 2 minutes between ignition attempts for gas to dissipate. Failure to do this may result in flame roll out beyond the emitter grid.

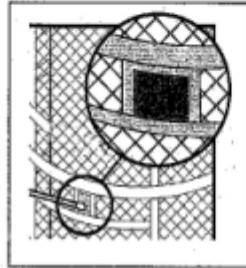

Note: it is possible to light the appliance using a long match, by lighting the burner through the ignition hole provided.

4. When the pilot is lit keep knob pressed for up to 20 seconds to heat the thermocouple flame sensor, then release it (first ignition generally takes more time, because the gas circuit is full of air).
5. If the pilot does not stay lit, repeat steps 2 - 4.
6. Turn knob to LOW position.
7. Adjust the heat input by turning the knob from the LOW position, to the HIGH position, as required.
8. After lighting, turn knob from LOW to HIGH, position and back, to check flame stability.
9. In case of accidental break down of the flame (due to wind or other reasons), a Flame Safety Device (FSD) will automatically shut-off gas supply within 90 seconds.

⚠ These lighting instructions must be followed. An unsafe condition can occur if they are not followed correctly.

Flame Characteristic

The flame pattern at the emitter screen should be visually checked whenever heater is operated.

If black soot is accumulating on the emitter grid or reflector, the heater should be **turned off** immediately. The heater should not be operated again until the unit is serviced and or repaired.

Moving patio heaters with gas bottle inside causes chargeable damage

OPERATING PROCEDURE

Note: The burner may be noisy when initially turned on, To eliminate excessive noise from the burner, turn the control knob to the LOW position. Then, turn the knob to the level of heat desired.

When heater is ON:

Emitter grid will become bright red due to intense heat. The colour is more visible at night. Burner will display tongues of blue flame. These flames should not produce thick black smoke, indicating an obstruction of airflow through the burners.

Operation pressure checked:

If the flame is very small, this is because the supply pressure is not enough. Please refill gas cylinder.

Re-light:

1. Turn the control knob to OFF position.
2. Wait five (5) minutes before attempting to relight pilot.
3. Repeat steps beginning with step 2 of the lighting instruction above.

Shut down instructions:

1. Push in and turn control knob clockwise to OFF position.
2. Turn LPG cylinder gas valve clockwise to OFF position when heater is not in use.

Note: After use, some discolouration of the emitter screen is normal.

The event of gas leakage:

1. Turn the control knob to OFF position.
2. Turn LPG cylinder valve to OFF position.
3. Wait 5 minutes to allow gas to dissipate.
4. If odor continues, immediately call gas supplier.



Warning: Heater will be hot after use. Handle with extreme care.