

BUFFALO

PRO

USER INSTRUCTIONS



CE

You should read these user instructions carefully before using the appliance.



Please read and keep these instructions

Keep these instructions with this appliance



Artikel/Artical Artikel/Article	Hokker Big Flame 215333			CE 0063 / #000000 09280 000
Land/Country Land/Pays	NL	AT/DE/PL/GB/IE	LU	FR/BE
Belasting/Power Leistung/Puissance	[Hi] 6,0 kW	[Hi] 6,0 kW	[Hi] 6,0 kW	[Hi] 6,0 kW
Categorie/Category Kategorie/Catégorie	I 2H (Natural gas)	I 2H (Natural gas)	I 2E (Natural gas)	I 2E+ (Natural gas)
Verbruik/Consumption Verbrauch/Consommation	A	A	A	A
Inrichting/Set up Auflegung/Conçu pour	G25- 25 mbar	G20-20 mb	G20- 20 mbar	G20 /G25- 20/25 mbar
Buffalo - Fourth Way - Avonmouth - Bristol - BS11 8TB				

Dear customer,

Please read these user instructions carefully before connecting the appliance to prevent damage due to improper use. Please pay special attention to the safety regulations.

Safety regulations

1. Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
2. The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
3. Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
4. Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
5. This appliance is intended solely for preparing food.
6. Always keep an eye on the appliance when in use.

Before use:

- This apparatus is only for use outdoors, or in a well ventilated area.
- Parts of the apparatus that have been sealed by the manufacturer may not be changed by the user.
- Before installation and use, read the instructions thoroughly.

General instructions:

1. **Safety Warning** – Gas equipment must be installed by a registered gas engineer.
2. This appliance is only suited for natural gas.
3. Ensure that there are no kinks in the gas hose.
4. The Hokker is only suitable for use outdoors or in a well ventilated area.
5. Keep the Hokker away from even slightly flammable material.
6. Do not move the Hokker during use.
7. Always close the gas tap when the Hokker is not being used.
8. Making modifications to the apparatus is dangerous and prohibited.
9. Maintain a distance of 30 cm around the Hokker free of obstructions and position the Hokker as level as possible.

*WARNING: some parts of the apparatus can become hot.
Keep children away from the gas ring.*

Igniting the Hokker

1. Place the pan carrier .
2. Turn the knob to the "*normal*" position. keep the knob pressed and press the ignition button a few times until the burner is burning completely. Keep the knob pressed in for approximately a further 10 seconds. The burner will continue to burn.

Turning off the gas griddle:

3. Turn the knob completely to the right. The burner will go out.

Note! After turning off the burners, wait approximately 10 minutes before reigniting the burners.

After turning off the burners, always turn off the main tap on the gas supply!

Problems:

possible cause

gas ring will not light:

- ignition defective
- thermocouple defective
- igniter dirty
- gas hose kinked
- injector blocked

gas ring does not light fully:

- gas hose kinked
- gas tap not fully open
- main injector blocked
- gas tap defective