

# Husky HN7 'Reflections' Dual-Zone Wine Cooler

## Owner Manual

To ensure safe operation, please read this instruction manual thoroughly before use.



For illustration only. Stock not included.

# Welcome to your new Husky

Thank you for buying this Husky Wine Cooler. It has been designed and manufactured for many years of trouble-free service.

Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Husky Wine Cooler.

## IMPORTANT NOTE:

**THIS APPLIANCE IS TO BE USED EXCLUSIVELY FOR THE STORAGE OF WINE. This Husky 'Reflections' Wine Cooler uses thermoelectric technology to cool drinks to approximately 15°C below ambient temperature, to a minimum of 8°C (upper zone). It is not intended to operate like, or compete with, a conventional compressor-driven refrigerator THIS MODEL IS NOT SUITABLE FOR THE STORAGE OF FOOD.**



### **WARNING: RISK OF ELECTRICAL SHOCK HAZARD**

**USERS IN NORTH AMERICA** This unit must be plugged into a grounded 120V AC circuit. If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the appliance is properly grounded. Stop using the appliance immediately if electric shock is felt when touching the cooler.

**USERS IN EUROPE** This unit must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. **DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF.** Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the cooler.

## **DISPOSAL OF OLD REFRIGERATORS**

**BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.**

**WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.**

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

**Please note:** compressor-driven refrigeration systems may contain gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions. Please ensure the pipework of your refrigerator is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

## DISPOSAL OF PACKAGING

All the packaging materials with your Husky Wine Cooler may be disposed of without danger to the environment.

The cardboard may be broken or cut into smaller pieces and given to a waste paper disposal service. The wrapping foil is made of polyethylene. The polyethylene pads and stuffing contain no fluorochloric hydrocarbons.

All these valuable materials may be taken to a waste collecting depot and used again after adequate recycling.

Consult your local authority for the name and address of the waste paper disposal services nearest to you.

## SAFETY INSTRUCTION & WARNINGS

Before switching on your Husky Wine Cooler, read the information in this User Guide carefully. The User Guide contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this booklet in a safe place for future reference. If you ever sell this unit, hand this User Guide to the new owner.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.

- Do not use a damaged unit. If you are in doubt, consult the supplier.
- Connection and installation of your Husky Wine Cooler are to be carried out in strict compliance with the instructions in this User Guide.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug your refrigerator by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- To prevent risk of accidental injury, the power cord should be secured behind the appliance and not left exposed or loose
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.
- DANGER OF FERMENTATION: Keep alcoholic beverages in airtight bottles or containers.
- Do not obstruct or cover the ventilation apertures.
- Do not allow children to play with your Husky Wine Cooler, or to sit on it or hang onto the door.
- This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



## SPECIFICATIONS

- This appliance is designed as a cooler for wine, NOT food.
- It is intended strictly for domestic use.

## BEFORE USING FOR THE FIRST TIME

- For good circulation, the vents must not be blocked. Allow 50mm clear space all round the unit for adequate ventilation. Your Husky Wine Cooler should be placed on flat and firm surface for quieter operation. If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may cause the carpet to fade.
- Do not expose the appliance to direct sunlight or a heat source such as ovens, radiators, heaters, etc.
- Do not under any circumstances place heated beverages or food in your Husky Wine Cooler.
- Do not open the door more often than necessary to lessen the escape of cold air.
- For better air circulation, do not overfill the unit.
- Adjust the temperature regulator according to the amount of product and the ambient temperature.

## BASIC OPERATION

 
**It is recommended that you site the Wine Cooler in a room where the ambient temperature is maintained between 18°-25°C/41°-77°F.**

**If the ambient temperature of the unit is outside this range, particularly during extreme hot or cold conditions, it is entirely normal that the temperature on the display fluctuates from the set temperature. This may also occur due to other factors such as opening the door frequently. For this reason we do not recommend locating the Wine Cooler in outdoor buildings including conservatories and garages.**

- Temperature Range For Your Wine Cooler:  
Upper zone: 8-18°C/46-64°F  
**Ideal for white and rosé wine**  
Lower zone: 9-18°C/48-64°F  
**Ideal for red wine.**
- Recommended Temperatures for Chilling Wine:  
Red wines: 14-18°C/57-65°F  
White wines: 9-14°C/49-58°F  
Rosé wines: 10-11°C/51-53°F  
Sparkling wines: 5-9°C/40-49°F

**NOTE: When you use the appliance for the first time or restart it after having been turned off for a long time, there may be a few degrees difference between the temperature you select and the one indicated on the LED readout. This is normal. Once the wine cooler has been running for a few hours the display will stabilise.**

## Setting the temperature control

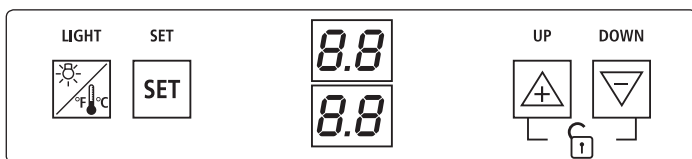

Your Husky Wine Cooler is fitted with an automatic control panel lock that activates 12 seconds after the last time a button has been touched. To unlock the panel press the UP and DOWN buttons simultaneously for three seconds. You will hear a 'beep'. The panel is now active for 12 seconds.

You can display the temperature in either Celsius or Fahrenheit by pressing the °F/°C button for three seconds. REMEMBER: you will need to unlock the control panel first (see above).

The temperatures for the upper and the lower compartments may be set independently. Note: the factory default setting is 12°C/54°F.

To adjust the temperature press SET and the upper display will flash. Set the desired temperature by pressing the UP or DOWN buttons on the control panel. The set temperature will increase by 1°F or 1°C for each depression of the UP button. The temperature will decrease by 1°F or 1°C for each depression of the DOWN button.

Press SET again and the lower display will flash. Set the desired temperature by pressing the UP or DOWN buttons as described above.

## Capacity

You may place up to 24 standard-sized 75cl bottles in this wine cooler: 8 in the upper compartment and 16 in the lower compartment. As bottles differ widely in size the actual number of bottles may vary.

## Interior light

The interior light may be turned ON or OFF by pushing the button marked with the "Light" symbol. The light will turn off automatically after 10 minutes.

## CLEANING

CAUTION: Failure to unplug the Wine Cooler could result in electrical shock or personal injury.

- Unplug the Wine Cooler, and remove all items including shelves.
- Wipe the inside surfaces with a damp cloth soaked in a solution of two tablespoons of ordinary baking soda to a litre of water. Do not use abrasive cleaners.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wipe the outside cabinet with a solution of warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

## MOVING YOUR HUSKY WINE COOLER

- Remove all bottles.
- Securely tape down the loose shelves inside your appliance.
- Tape the door shut.
- Protect the outside of appliance with a blanket, or similar item.

## ENERGY SAVING

Your Husky Wine Cooler should be located in the coolest area of the room, away from sources of heat, and out of the direct sunlight.

One characteristic of thermoelectric units is the length of time it requires to recover from having the door opened and shut frequently. It may be necessary to wait longer for the temperature to return to its former level once the door has been opened for too long. This is normal for this type of unit.

## TROUBLESHOOTING

Before returning your Husky Wine Cooler to the store, check the following points; you may be able to solve any problem yourself.

<b><u>Problem</u></b>	<b><u>Solution</u></b>
<b>The unit is not cooling</b>	<ul style="list-style-type: none"> <li>• Check power cable is connected and fuse is intact.</li> <li>• Wrong temperature selected.</li> <li>• The cooler is overfilled.</li> <li>• Appliance exposed to direct sunlight or a heat source.</li> <li>• Door is opened too often.</li> </ul>
<b>Poor performance</b>	<ul style="list-style-type: none"> <li>• Door opened too often or open too long.</li> <li>• Check the ventilation.</li> <li>• Check the door gasket is not damaged.</li> <li>• The ambient temperature is too high or too humid.</li> </ul>
<b>Unusual noises or noisy operation</b>	<ul style="list-style-type: none"> <li>• Appliance is not on a level, firm surface or may be touching other items.</li> <li>• Shelves are out of position.</li> <li>• Clean the dust from the fan(s).</li> </ul>
<b>Inner surfaces are iced up</b>	<ul style="list-style-type: none"> <li>• Door opened too often or open too long.</li> <li>• Turn the unit off for 1 hour, then restart.</li> <li>• The ambient temperature is too high or too humid.</li> </ul>